



FLAMEPROOF Gas Sensor Housing Type GSH4-S fitted with PCB for a Standard Infrared Gas Sensor

ATEX Certified II 2 G Ex db IIC T4 Gb

IECEx Certified Ex db IIC T4 Gb

 $Ta = -20^{\circ}C \text{ to } +60^{\circ}C$



FEATURES INCLUDE: -

- ATEX and IECEx Certified explosion proof Exd housing for the Dynament range of "Standard" infrared sensors
- Stainless steel housing with tamperproof protection
- For use with separately certified, industry standard junction boxes or OEM gas detector enclosures.
- Compact Size
- Various mounting threads available M20, ½" NPT, ¾" NPT
- Housing can be opened to gain access to the plug-in sensor.
- Gas sampling adaptor accessory available for easy calibration.
- Rainguard accessory with gas sampling feature also available to protect the sensor in wet environments or areas subjected to hosing.

TDS 0076 Issue 1.8 16/11/20 Change Note: 683 Page 1 of 7

| Specification | | |
|----------------------|--|--|
| Туре | Exd Certified Flameproof sensor housing. | |
| Housing Material | Stainless Steel grade 316 | |
| Body Dimensions | 40 mm Diameter x 61 mm Long (including a thread length of 15mm) | |
| Weight (approx) | 280 grams | |
| Operating Temp | -20°C to +60°C See note 1 below. | |
| Storage Temp | -20°C to +60°C See note 1 below. | |
| Humidity Range | 0 to 95% R.H. Non-condensing | |
| Environmental Rating | IP65 or IP66 when fitted with optional PTFE filter. | |
| Gas Type | Hydrocarbon, carbon dioxide or nitrous oxide | |
| Sensor Type | Any sensor from the Dynament Ltd range of "Standard" sensors | |
| Measuring Range | Dependent upon sensor type specified when ordering | |
| Response Time | T90 = <30sec. Note that the response time will be increased when the optional PTFE filter is fitted. Response time is dependent upon gas type and concentration. | |


| Hazardous Area Certification | | |
|------------------------------|---|--|
| ATEX | SIRA 10ATEX1358X | |
| | II 2 G Ex db IIC T4 Gb (T _{amb} = -20°C to 60°C) | |
| | EN 60079-0 :2012+A11 :2013, EN 60079-1 :2014 | |
| IECEx | IECEx SIR 10.0184X | |
| | Ex db IIC T4 Gb (T _{amb} = -20°C to 60°C) | |
| | IEC 60079-0 :2011 Edition 6.0, IEC 60079-1 :2014-06 Edition 7 | |
| Ambient Temperature | -20 to +60 ° C (T4) (See note 1) | |
| Zones | 1 & 2 | |

| Connection details | | | |
|--|---------------|-------------|--|
| Wire function | Socket Number | Wire colour | |
| Lamp return | 1 | Brown | |
| Lamp +5V | 2 | Purple | |
| +5V Pyro supply | 3 | Red | |
| Detector output | 4 | Orange | |
| Reference output | 5 | Green | |
| Thermistor output | 6 | White | |
| 0V Pyro supply and sensor case connection (unless isolated sensor is fitted) | 7 | Black | |

Note:

The temperature ranges stated here refer to the GSH4 Exd sensor housing only. Refer to the relevant sensor data sheet for the sensor specifications.

TDS 0076 Issue 1.8 16/11/20 Change Note: 683 Page 2 of 7

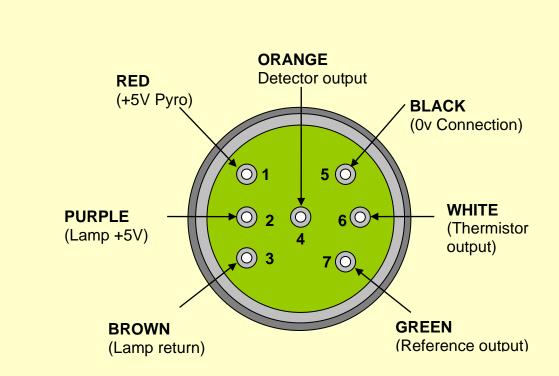

VIEW OF SENSOR SOCKETS. COLOURS REFER TO THE CONNECTING WIRES

TDS 0076 Issue 1.8 16/11/20 Change Note: 683 Page 3 of 7

Instructions for fitting a sensor inside the housing

- 1) Loosen the grub screw using a 2mm A/F hexagon key. Ensure that the screw is sufficiently removed to prevent it from contacting the internal threads of the sensor housing.
- 2) Unscrew the cover by turning it anti-clockwise.
- 3) Insert the sensor into the sockets on the circuit board, ensuring that it is fully pressed into position.
- 4) The assembly contains a black plastic spacer that fits over the sensor to reduce "dead space" and to provide a good seal to the inside of the cover of the housing. Gently fit the plastic spacer over the sensor, ensuring that it comes into close contact with the top of the sensor. Note that the spacer contains an internal O-ring, some resistance will therefore be felt as the spacer is fitted over the sensor. Also included is a foam washer beneath which is a PTFE filter to prevent the ingress of water or dust. Whilst offering environmental protection, this filter will increase the gas response time. If preferred, the filter can be removed, after temporarily removing the foam washer.
- 5) Carefully replace the cover by screwing it clockwise until the gap between the cover and flange of the housing is closed. Note that there will be some resistance as the gap closes because of the compression of the foam washer and the internal O-ring that provides a seal.
- 6) Re-tighten the grub screw, avoiding excessive force.



TDS 0076 Issue 1.8 16/11/20 Change Note: 683 Page 4 of 7

Installation Instructions for Sensor Type GSH4

The following instructions are specific to hazardous area installations and apply to GSH4 Gas Sensors covered by certificate numbers **Sira 10ATEX1358X and IECEx SIR 10.0184X.**

The ATEX/IECEx certification markings are as follows:

Ex db IIC T4 Gb ($T_{amb} = -20$ °C to 60°C)

For ATEX certified equipment only:

(reference European ATEX Directive 2014/34/EU)

- 1 The "XXX" contained within the type number GSH4 XXX is used to define the specific detector element contained within the sensor.
- 2 The GSH4 XXX Series Gas Sensor incorporates integral cabling, which requires suitable protection and termination, and consequently it must not be used as a stand-alone item in a hazardous area without further protection.

THE FOLLOWING SPECIAL CONDITIONS FOR SAFE USE APPLY: -

- a) It is the user's responsibility to ensure that earth continuity is maintained via the mounting arrangement.
- b) The integral conductors must be suitably mechanically protected and terminated in a suitable terminal or junction facility.
- c) The integral conductors shall be suitably clamped within 100 mm of the point at which they exit the body of the Gas Sensor Type GSH4 XXX.
- d) The insulation of the integral conductors shall not be subjected to a temperature greater than 105°C.
- 3 The sensor is only certified for use in ambient temperatures in the range -20°C to +60°C and must not be used outside this range.
- 4 The maximum power rating is 1.1W, with an operating voltage range of 0 to 30V.
- 5 Assembling and dismantling: The sensor is supplied fully assembled. No dismantling is required during normal service. The sensor must not be removed from its mounting when in use in a potentially explosive atmosphere.
- 6 Maintenance: The user should ensure that the sensor opening is kept free from blockages such as a build-up of dust or dirt that would otherwise restrict gas flow.
- 7 Servicing: Power must be removed from the sensor and it must be established that there is no potentially explosive gas atmosphere present before servicing can commence. The only user serviceable part is the detector element contained within the sensor. A grub screw that must be loosened using a 2mm A/F hexagon key retains the sensor cover. When replacing the cover, the threads must be fully engaged and the grub screw must be re-tightened.
- 8 Emergency repairs: The sensor is not an item to which emergency repairs can be made.

TDS 0076 Issue 1.8 16/11/20 Change Note: 683 Page 5 of 7

- 9 Adjustment: There are no adjustment facilities on the GSH4 XXX Series Gas Sensor
- 10 The GSH4 XXX Gas Sensor has not been assessed as a safety-related device (EHSR 1.5).
- 11 The end user/installer shall be aware that the certification of the GSH4 XXX Gas Sensor relies upon the following materials used in its construction, which are suitable for most common applications:

Outer housing: stainless steel Sintered filter: stainless steel Encapsulant: epoxy resin

In accordance with the note in EN 60079-0, the end user/installer shall inform the manufacturer of any adverse conditions that the GSH4 XXX Gas Sensor may encounter. This is to ensure that the GSH4 XXX Gas Sensor is not subject to conditions that may cause degradation of these materials.

12 The GSH4 XXX Gas Sensor carries the following certification marking:

DO NOT OPEN WHEN AN EXPLOSIVE GAS ATMOSPHERE IS PRESENT

DYNAMENT LTD.
HERMITAGE LANE INDUSTRIAL ESTATE
MANSFIELD
NOTTINGHAMSHIRE
NG18 5ER
UNITED KINGDOM

IECEX SIR 10.0184X Ex db IIC T4 Gb -20°C +60°C 1.1 WATT MAX 30V MAX.

GAS SENSOR TYPE GSH4

SERIAL No. XXXX

 $\left\langle \left\langle \left\langle \right\rangle \right\rangle \right\rangle$ II 2

II 2 G

((1180

YYYY

SIRA 10ATEX1358X

Notes:

Additional information not ratified by SIRA may also appear on the gas sensor. YYYY denotes the year of manufacture ZZZZ denotes the thread form

TDS 0076 Issue 1.8 16/11/20 Change Note: 683 Page 6 of 7

Accessories



GSH4 fitted with optional Rainguard Type GSH4 - GUARD featuring a gas-sampling tube for gas checks.

GSH4 fitted with optional Calibration Adaptor Type GSH4 –CAL-ADTR



Dynament Limited

Hermitage Lane Industrial Estate • Kings Mill Way • Mansfield • Nottinghamshire • NG18 5ER • UK.

Tel: 44 (0)1623 663636 •

email: sales@dynament.com • www.dynament.com

TDS 0076 Issue 1.8 16/11/20 Change Note: 683 Page 7 of 7